


INSTALLING THE BATTERIES

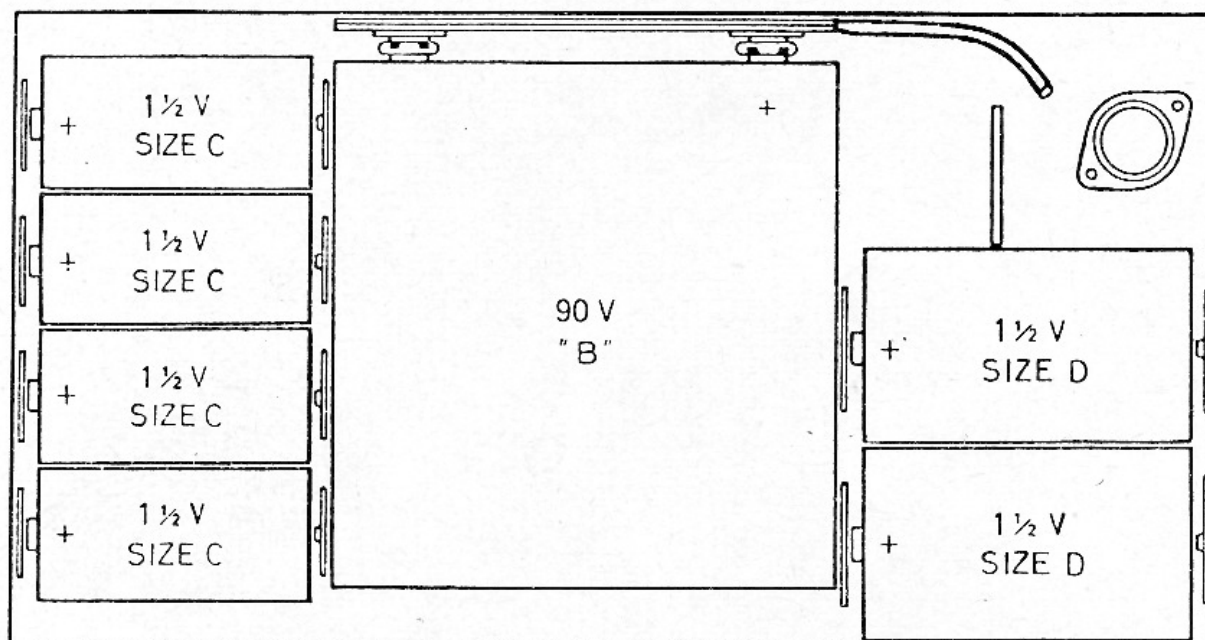

Quantity	Type	Manufacturer
4	1 1/2 Volt 1 1/2 Volt A Batt.	EVEREADY NO. 935 Size C or RCA NO. VS 035 Size C or BURGESS NO. 1 Size C or EQUIVALENT
2	1 1/2 Volt 1 1/2 Volt A Batt.	EVEREADY NO. 950 Size D or RCA NO. VS 036 Size D or BURGESS NO. 2R Size D or EQUIVALENT
1	90 Volt "B" 90 Volt "B"	EVEREADY NO. 490 or RCA NO. VS 090 or BURGESS NO. N 60 or EQUIVALENT

B. Clifford

Attention!

Before operating the "Babyphon" remove corrugated paper from between chassis and rear cover and connect plug with battery box.

Do not close front cover when operating phonograph.

Attention!

Avant de faire marcher le »Babyphon« enlevez le papier ondulé parmi le chassis et le couvercle d'arrière et reliez le fiche avec la boîte des batteries.

Ne fermez pas le couvercle antérieur quand vous faites marcher le phonographe.